



P O Box 139, Chatswood
NSW 2067, Australia
Tel: +61 (0)2 9412 2288
Fax: +61 (0)2 9412 2233
www.unipage.com.au
sales@unipage.com.au



AIO PAGING SYSTEM

All-In-One

User Manual
(Manual Ver. 1.00)

UniPage

email sales@unipage.com.au

website www.unipage.com.au

Tel 02 9412 2288

Fax 02 9412 2233

PO Box 139, Chatswood, NSW, 2067, Australia



P O Box 139, Chatswood
NSW 2067, Australia
Tel: +61 (0)2 9412 2288
Fax: +61 (0)2 9412 2233
www.unipage.com.au
sales@unipage.com.au

NOTICE

This manual, software and electronic circuitry are copyrighted. All rights reserved. Under the copyright laws, this manual, software and electronic circuitry may not be copied, in whole or in part without written prior consent of UniPage.

All information provided in this document is carefully prepared and offered in good faith as a guide in the installation, use and servicing of our products. Installers must ensure that the final installation operates satisfactorily within the relevant regulatory requirements. UniPage accepts no responsibility for incorrect installation. UniPage reserves the right to change products, specifications and installation data at any time without notice.

UniPage makes certain limited warranties with respect to defective diskettes, documentation and electronic circuitry. Please see the associated information contained on this page.

LIMITED WARRANTY

With respect to the physical documentation and physical electronic circuitry enclosed herein, UniPage warrants the same to be free of defects in materials and workmanship for a period of one year from the date of purchase. In the event of notification within the warranty period of defects in material or workmanship, UniPage will replace the defective diskettes, documentation and electronic circuitry. The remedy for breach of this warranty shall be limited to replacement and shall not encompass any other damages including but not limited to loss of profit and special incidental, consequential, or other similar claims.

UniPage Korea specifically disclaims all other warranties, expressed or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose with respect to defects in the documentation and electronic circuitry and the program license granted herein, in particular, and without limiting operation of the program license with respect to any particular application, use or purpose.

INSTRUCTION MANUAL for Multicall AIO Charger Transmitter



1. Quick Installation Guide

- Step ❶ Lock the antenna to the right corner of the Multicall AIO Transmitter.
(Fit over plug and twist left to lock antenna in place)
- Step ❷ Plug the Multicall AIO Transmitter A/C adaptor into the Multicall AIO Transmitter and then into a standard outlet. A surge protector is recommended.
- Step ❸ If more than one charging base is used, connect base units with jumper wires.
- Step ❹ Insert the pagers into the charging slots. A charging indicator illuminates for charging. The pager will be fully charged in 2 hours.

2. SYSTEM SETTINGS

To enter programming mode, press the "SETUP" button and enter the password "1379" followed by "ENTER" If the password is accepted, the display will show "use * to scroll to menu options"

Use the "*/Menu" key to scroll through the several menu options or press "CANCEL" to exit the system setting menu.



P O Box 139, Chatswood
NSW 2067, Australia
Tel: +61 (0)2 9412 2288
Fax: +61 (0)2 9412 2233
www.unipage.com.au
sales@unipage.com.au

◆ Save Mode (Special Option)

With this feature, the transmitter can send a signal automatically, when a pager number is stored.

- Enter the number (#1) of the pager and press the "ENTER" key.
- Enter another number (#2) of pager and press "ENTER" key.
- The transmitter will send signals for calling pagers (#1, #2) in sequence.

1. Set Current Time

- When "Set Current Time" is displayed on the menu, set the hour and then press the "ENTER" key.
- Set the minutes and press the "ENTER" key.
- Use "#/Select" key to select AM or PM
- After the correct time is set, press the "ENTER" or "*/Menu" key to return to the main menu or press the "CANCEL" key twice to exit the system settings menu.

2. Set Sleep Time

With this feature, pagers can automatically be turned OFF.

To turn this feature OFF

- Press "#/Select" key to turn the feature "OFF"
- Press "ENTER" to go back to the main menu.

To change the sleep time

- Press "#/Select" key to turn the sleep time "ON"
- Set the hour and then press "ENTER" key
- Set the minutes and then press "ENTER" key
- Use the "#/Select" key to select AM or PM
- After required time is set, press the "ENTER" or "*/Menu" key to return to the main menu or press "CANCEL" key twice to exit the system setting menu.



3. Range Test

This feature determines the radio coverage area.

- Remove a number of pagers from the charger base
- At the range test menu, press “#/Select” key to turn range test “ON”
- Press “ENTER” to start the range test. As soon as range test is activated the pagers flash once per every 10 seconds whilst in range of the AIO transmitter.

4. Pre Set Message

Messages used frequently can be preset.

- At the Pre Set message menu, press “#/Select” key to turn Pre Set Message “ON” or “OFF”
- After Pre Set Message is set, press the “ENTER” or “*/Menu” key to return to the main menu or press “CANCEL” key twice to exit the system setting menu.

5. Pager Alert

Pager alert type selection is available through this menu option.

Ensure that all pagers are returned before performing this procedure.

To Change the alert mode of the pagers:

- Remove all the pagers from the charger base or unplug the power supply that is connected to the charger base.
- At the “Set Pager Alert” menu, press “#/Select” key to scroll through the different alert options.
- After making a selection, press the “ENTER” key 3 times. After sending the message, the pagers will now respond with the new selected alert mode.
- Return all the pagers to the charger base or plug the power supply back into the AC outlet. The pagers are ready to receive the page with their new alert mode.

6. Set Pager ID (IQ Charger Transmitter Only)

Pager number and LED display changing (IQ only).

To Change the ID (Base, Individual, etc) of the pagers, follow these instructions:

- At the “RX Read Mode” menu, press “#/Select” key to scroll through the different options. (1. Base Id, 2. S/N)
- After making a selection, press the “ENTER” key. The pagers’ information (Base ID, or S/N) will be displayed on the LED display.
- At the “RX Read Mode” menu, press the “*/Menu” key to scroll through the different options. (1. Set



P O Box 139, Chatswood
NSW 2067, Australia
Tel: +61 (0)2 9412 2288
Fax: +61 (0)2 9412 2233
www.unipage.com.au
sales@unipage.com.au

indivi ID, 2. Set the same ID, 3. Set RX Base ID)

- After making a selection, press the "ENTER" key. You are now able to enter the required settings.
- Press the "ENTER" key to complete the setting.

7. Duty Alert

With this feature, the transmitter will send a message at a preset time, to a certain pager to remind them of a duty required of them. For example, a pager can receive a page every 3 minutes to remind the staff member to check the restroom.

Up to 3 different groups can be assigned as duty alert pagers.

To program the duty alert

- At the "Duty Alert" menu, press "#/Select" key to turn the duty cycle "ON" and press the "ENTER" key
- Enter the duty pager number and press "ENTER" key.
- Enter the cycle time (in minutes) and press the "ENTER" key.
- Enter the numeric message.
- After setting the duty alert function, press "ENTER"
- Display will show "Duty __ saved"

8. Out of Range

With this feature, the pagers will play a melody when taken out of range of the transmitter to inform the guest that they are located "Out of Range" and will miss their page. The melody will only stop, when the pager is within range.

Turning the Out of Range "ON"

- Remove all the pagers from the charging unit or unplug the power supply that is connected to the charger base.
- At the "Out of Range" menu, press the "#/Select" key to turn the Out of Range "ON"
- Press the "ENTER" key 3 times. After sending the signal, all the pagers will light up once indicating that the new command was received.

Turning the Out of Range "OFF"

- Remove all the pagers from the charging unit or unplug the power supply that is connected to the charger base
- At the "Out of Range" menu, press "#/Select" key to turn the Out of Range "OFF"
- Press "ENTER" key 3 times. After sending the signal, all the pagers will light up once indicating that the new command was received.