


Easy Set Up Instructions.

Thank you for purchasing the UniPage/HME GuestCall™ paging system. For full detailed information, please consult the instruction manual.

System Configuration: Your GuestCall system was programmed and charged at the factory and will function as soon as it is powered up.

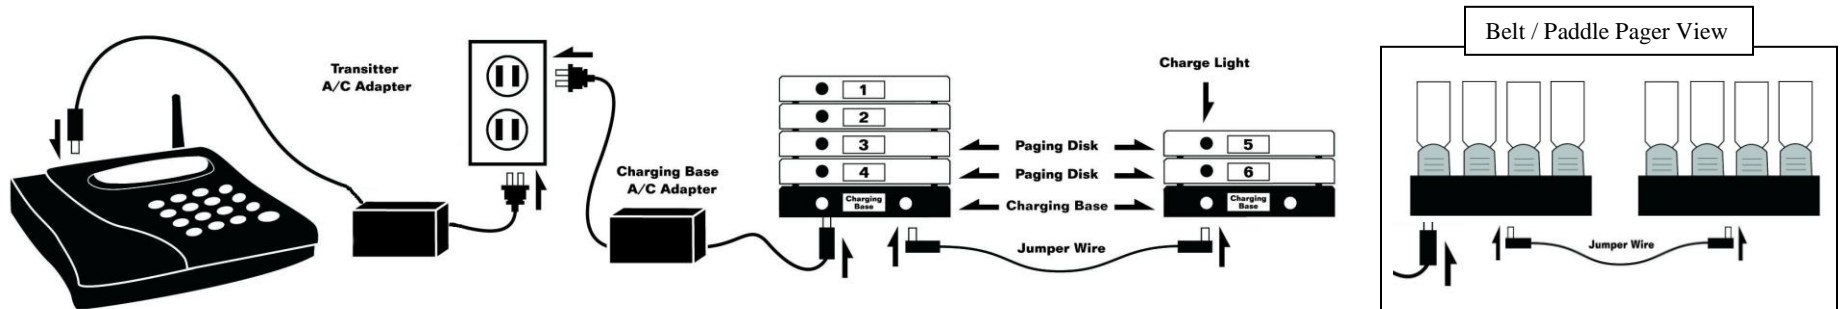

Step 1

Lock the antenna to the top right corner of the GuestCall™ transmitter. (fit over plug and twist left to lock antenna in place).

Step 2

Plug the GuestCall™ transmitter A/C adaptor into the GuestCall™ transmitter and then into a standard 220v outlet. A surge protector is recommended.

Step 3

If more than one charging base is used, connect base units with jumper wires. Plug the charging base A/C adaptor into charging base and then into a standard 220v outlet. A surge protector is recommended.

Step 4

Stack GuestCall™ coasters on the chargers (max 20 high) or place pagers into the charging slots. A red or green light will illuminate to indicate charging. Pagers will be fully charged in 2 hours.

To Use

Take a GuestCall™ Coaster / Pager off of a charger. It will flash & vibrate. To page a guest, simply enter the pager number and press "SEND" on the GuestCall™ transmitter. The pager will flash & vibrate until it is returned to the charger.

Default set up is as follows:

- Current time is set.
- Range test is off. (Testing range is only necessary for very large properties).
- Pagers are set to vibrate & flash.
- GuestCall - Out of range alert is off.
- With PlayCall Pagers – Out of range on

This configuration should be satisfactory for most locations. Should the need arise to make any configuration changes, follow the instructions provided in the detailed instruction booklet.

If you have difficulty please call our customer service department at: +61 (0) 2 9412 2288 and an UniPage/HME representative will be happy to walk you through the process.

HME Wireless

UniPage

PO Box 139
Chatswood, NSW, 2067,
Australia

www.unipage.com.au