



P O Box 139, Chatswood
NSW 2067, Australia
Tel: +61 (0)2 9412 2288
Fax: +61 (0)2 9412 2233
www.unipage.com.au
sales@unipage.com.au

IQ PAGER

INSTRUCTIONAL MANUAL



INSTRUCTION for IQ Pager



✘ When the pager is removed from the charger base, it will be vibrating and flashing for 5 or 10 seconds.

Programming the Alert Mode

A) Capcode 1 (Group Message)

Message	Alert Description	Alert Time & Remark
9292	Vibrating Only	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
9393	Out of Range "OFF"	
9494	Out of Range "ON" (Melody & Voice) - Please Return. You are out of range and cannot receive your page	The pager will melody, when it is out of range.
9595	Beeping, Flashing	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
9696	Vibrating, Flashing	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
9797	Flashing Only	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue



P O Box 139, Chatswood
 NSW 2067, Australia
 Tel: +61 (0)2 9412 2288
 Fax: +61 (0)2 9412 2233
 www.unipage.com.au
 sales@unipage.com.au

9898 (VIBE&LED&BEEP)	Beeping, Vibrating and Flashing	Group Messages are available – 9090,9091,9092,9093,9094,9095,9099
9587 (LED & VOICE)	Flashing, Voicing	Group Messages are available – 9090,9091,9092,9093,9094,9095,9099
9887 (VIBE&LED&VOICE)	Vibrating, Flashing, and Voicing	Group Messages are available – 9090,9091,9092,9093,9094,9095,9099
99	Sleep Mode	
8281	LED flashes two times	Alert Time : 5 Sec (when the pager is removed from the charger base)
8282	LED flashes two times	Alert Time : 10 Sec (when the pager is removed from the charger base)
8381	LED flashes two times	Speaker Volume Range Setting
8382	LED flashes two times	Speaker Volume Range Setting
8383	LED flashes two times	Speaker Volume Range Setting
8882	LED flashes two times	Beeping & Flashing for 3 min (when it receives the Group Call)
8883	LED flashes two times	The last message will be activated (when it receives the Group Call)
9090	LED flashes two times	Alert Time : 8 sec
9091	LED flashes two times	Alert Time : 15 sec
9092	LED flashes two times	Alert Time : 30 sec
9093	LED flashes two times	Alert Time : 60 sec
9094	LED flashes two times	Alert Time : 120 sec
9095	LED flashes two times	Alert Time : 180 sec
9099	LED flashes two times	Alerting continuously
8380	LED flashes two times	Speaker Volume Level 1
8381	LED flashes two times	Speaker Volume Level 2
8382	LED flashes two times	Speaker Volume Level 3

8383	LED flashes two times	Speaker Volume Level 4
8384	LED flashes two times	Speaker Volume Level 5
8600	LED flashes two times	Voice "OFF"
8601	LED flashes two times	Voice "On"
8001	LED flashes two times	Voice #1 (Thank you for waiting. Your table is now ready.)
8002	LED flashes two times	Voice #2 (Thank you for waiting. Please return to the host for seating.)
8003	LED flashes two times	Voice #3 (Please return to the reception area.)

B) Capcode 2 (Individual Message)

Message	Alert Description	Alert Time & Remark
No Message	The last message will be activated	Group Messages are available – 9090,9091,9092,9093,9094,9095,9099

C) Capcode 4 (Group Call)

Message	Alert Description	Alert Time & Remark
No Message	<ul style="list-style-type: none"> • 8882 SETTING → BEEP & FLASH & VOICE (Follow my Voice. I'm over here.) • 8883 SETTING → The last message will be activated 	<p>This activation lasts for 10 minutes.</p> <p>Group Messages are available – 9090,9091,9092,9093,9094,9095,9099</p>
To set the "Base Id"	This function changes the Base Id, when the pager is in the charger base	Ex) Base Id: 070, 1249 → ENTER → 9*7*8 → <u>070</u>

- ✘ When the "Out of Range" is activated, display will show "---" with a voice.
- ✘ When the pager receives the individual message (CAP2), the pager number flashes.
- ✘ When the pager receives the group message (CAP4), display will show the pager number continuously. (Without flashing)
- ✘ When the pager is in the charger base, display will show the pager number continuously.
- ✘ The number of voice activation.



P O Box 139, Chatswood
NSW 2067, Australia
Tel: +61 (0)2 9412 2288
Fax: +61 (0)2 9412 2233
www.unipage.com.au
sales@unipage.com.au

- ALERT TIME 8 sec (9090) setting → 1 time
- ALERT TIME 15 sec (9091) setting → 2 times
- ALERT TIME 30 sec (9092~9095, 9099) setting → 3 times

Low Battery Indicator

When low battery is detected "LO" will be displayed, and the Low Battery Indicator (LED light) will be flashing until it is charged. With the sign of "LO", you need to slot the pager in the charger base. When the pager is in the charger for charging the battery, the flashing of LED will be lasting for twenty minutes.